

## PIPE SEALING COUPLING - 2"

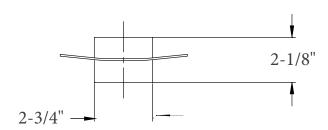

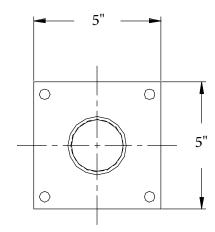

2" FPT PIPE COUPLING STAINLESS STEEL

Model C200S

\* Stainless Steel Hardware & 3M Sealant Provided

- INSTALLATION INSTRUCTIONS

  1. LOCATE PIPE OR COUPLING CENTER.

  2. CUT HOLE TO THE OUTSIDE DIAMETER OF THE COUPLING.

  3. APPLY GASKET TO COUPLING OR BASIN.

  4. PLACE COUPLING AND DRILL HOLES FOR

- 5. INSERT BOLTS, WASHERS, NUTS AND TIGHTEN.



PIPE COUPLINGS Reference:	Scale: None Drawn By: RM Appv'd By: Date:	This print is and contains confidential proprietary information owned exclusively by TOPP MOUSTRES, MC. It is furnished on a strictly confidential basis. This restriction includes, but is not limited to the confident but this print will not only be used as a record or loderly for impact parts for or for their information purposes and will not be used to manufacture or procure the enanticisture of the items sham in this print to your other source from TOPP INDUSTRES, MC.
Highway 25 North P.O. Box 420 Rochester, IN 46975 Phone: 800/354-4534 Fax: 574/223-6106	Supersedes Prints Prior To:	09-07-13